



# CMSI-8H8HS

8×8 HDMI Matrix



Operation Manual



## **DISCLAIMERS**

The information in this manual has been carefully checked and is believed to be accurate. Cypress Technology assumes no responsibility for any infringements of patents or other rights of third parties which may result from its use.

Cypress Technology assumes no responsibility for any inaccuracies that may be contained in this document. Cypress also makes no commitment to update or to keep current the information contained in this document.

Cypress Technology reserves the right to make improvements to this document and/or product at any time and without notice.

## **COPYRIGHT NOTICE**

No part of this document may be reproduced, transmitted, transcribed, stored in a retrieval system, or any of its part translated into any language or computer file, in any form or by any means—electronic, mechanical, magnetic, optical, chemical, manual, or otherwise—without express written permission and consent from Cypress Technology.

© Copyright 2011 by Cypress Technology.

All Rights Reserved.

Version 1.1 August 2011

## **TRADEMARK ACKNOWLEDGMENTS**

All products or service names mentioned in this document may be trademarks of the companies with which they are associated.





## SAFETY PRECAUTIONS

Please read all instructions before attempting to unpack, install or operate this equipment and before connecting the power supply.

Please keep the following in mind as you unpack and install this equipment:

- Always follow basic safety precautions to reduce the risk of fire, electrical shock and injury to persons.
- To prevent fire or shock hazard, do not expose the unit to rain, moisture or install this product near water.
- Never spill liquid of any kind on or into this product.
- Never push an object of any kind into this product through any openings or empty slots in the unit, as you may damage parts inside the unit.
- Do not attach the power supply cabling to building surfaces.
- Use only the supplied power supply unit (PSU). Do not use the PSU if it is damaged.
- Do not allow anything to rest on the power cabling or allow any weight to be placed upon it or any person walk on it.
- To protect the unit from overheating, do not block any vents or openings in the unit housing that provide ventilation and allow for sufficient space for air to circulate around the unit.

## REVISION HISTORY

VERSION NO.	DATE DD/MM/YY	SUMMARY OF CHANGE
RDV1	11/11/11	Preliminary Release
RDV2	13/12/11	Power Supply Change
RDV3	15/02/12	LAN Function
VS0	29/03/12	Updated format, diagrams, and statements
RDV4	04/07/12	Control's Function
VS0	24/07/12	Telnet and Web GUI sections updated
RDV5	04/10/12	Add Web GUI page
VS0	14/06/13	Updated screenshots.

# CONTENTS

<b>1. Introduction</b> .....	1
<b>2. Applications</b> .....	1
<b>3. Package Contents</b> .....	1
<b>4. System Requirements</b> .....	1
<b>5. Features</b> .....	2
<b>6. Operation Controls and Functions</b> .....	3
6.1 Front Panel .....	3
6.2 Rear Panel.....	4
6.3 Side Panel .....	5
6.4 Remote Control.....	5
6.5 RS-232 Pin Assignment .....	6
6.6 RS-232 and Telnet Commands .....	7
6.7 Telnet Control .....	8
6.8 Web GUI Control .....	10
<b>7. Connection Diagram</b> .....	11
<b>8. Specifications</b> .....	12
<b>9. Acronyms</b> .....	13





## 1. INTRODUCTION

The 8×8 HDMI Matrix supports the transmission of video signal (up to 1080p Full HD/1920×1200@60Hz) with multichannel digital audio from up to eight high definition sources to up to eight HDMI outputs, and allowing any source to be independently displayed on any monitor. Also, the unit can be controlled via IR, RS-232, Telnet, Web GUI or the front panel buttons.

## 2. APPLICATIONS

- Video/TV wall display
- Commercial advertising and display
- Lecture room display and control
- Hyper market demonstration and control

## 3. PACKAGE CONTENTS

- 8×8 HDMI Matrix
- 1×24V/6.25A DC Adaptor
- 1×Remote Control
- 1×IR Extender
- Operation Manual

## 4. SYSTEM REQUIREMENTS


- HDMI equipped input source devices with HDMI cables
- HDMI equipped output displays (TVs or monitors) or HDMI equipped AV receivers with HDMI cables

## 5. FEATURES

- HDMI, HDCP 1.1 and DVI compliant
- Supports HDMI features including 3D
- Supports audio sampling rate up to 192 kHz
- Supports resolutions VGA~WUXGA and 480i~1080p dependent upon the output display's EDID settings
- Supports 3D signal display dependent upon the output display's EDID settings
- Supports HDMI input up to 15 meters at 8-bit resolution or 10 meters at 12-bit resolution and HDMI output up to 15 meters at 8-bit/12-bit
- Supports IR extension
- Supports RS-232, remote control, on-panel control and IP Control (Telnet and Web GUI )
- 2U size design

## 6. OPERATION CONTROLS AND FUNCTIONS

### 6.1 Front Panel

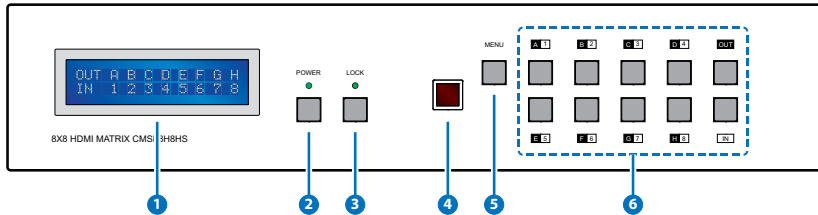

- 1 **LCM:** Displays the setting information of each input and output setting.
- 2 **POWER:** Press this button to power the device on/off. The LED will illuminate green when the power is on, red when it is in 'Standby' mode.
- 3 **LOCK:** Press this button to lock all the buttons on the panel; press again to unlock. The LED will illuminate green when locked.
- 4 **IR:** IR Receiver window (accepts the remote control signal of this device only).
- 5 **MENU:** Press this button to access the LCM menu system, from here EDID settings can be managed and IP system settings are displayed.

*Note: For the 'TV' EDID setting, the unit will read and store the EDID information of the display connected to HDMI output A. For the 'STD' EDID setting the unit's built-in EDID setting will be used (1080p@60/12-bit for video and LPCM 2CH for audio).*

- 6 **1~8/A~H and OUT/IN:** Press the OUT button and then the number buttons to select the required output ports, and press IN button and then a single number button to select the required input source, finally press the MENU button to confirm the selection.


For example, if outputs A~D need to be set to input 1 and outputs E~H need to be set to input 2 then the following sequence of button presses need to be performed:

Press: OUT→A→B→C→D→IN→1→MENU,  
and then press: OUT→E→F→G→H→IN→2→MENU.

*Note: If the MENU button is not pressed the selection will not be changed.*




## 6.2 Rear Panel

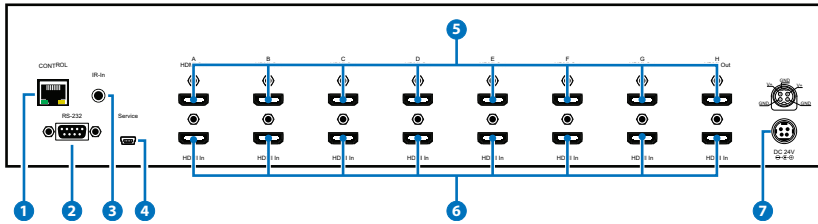


- 1 CONTROL:** This port is the link for Telnet and Web GUI controls, connect to an active Ethernet link with an RJ45 terminated cable (for further details, please refer to section 6.7 & 6.8).  
**Warning: Please do not connect this port directly to the PC/Laptop as the Telnet function will not work.**
- 2 RS-232:** Connect to a PC or control system with D-Sub 9-pin cable for the transmission of RS-232 commands.
- 3 IR IN:** Connect to the supplied IR extenders for IR signal reception from the remote control of the Matrix. Ensure that the remote is within the direct line-of-sight of the IR extender when used.
- 4 SERVICE:** Manufacturer use only.
- 5 HDMI OUT A~H:** Connect to HDMI equipped TVs or monitors for display of the HDMI input source signal.
- 6 HDMI IN 1~8:** Connect to the HDMI input source devices such as a DVD player or a Set-top Box with HDMI cable or DVI to HDMI cable..
- 7 DC 24V:** Plug the 24 V DC power supply into the unit and connect the adaptor to an AC outlet.

## 6.3 Side Panel

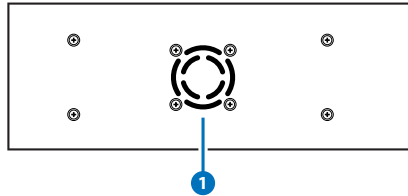

- 1 Fan Ventilator:** These are air ventilation areas, DO NOT block these areas or cover it with any object. Please allow adequate space around the unit for air circulation.

## 6.4 Remote Control

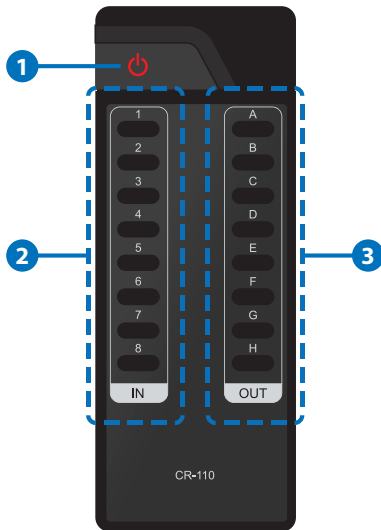

- 1 POWER:** Press this button to switch on the device or set it to standby mode.
- 2 IN:** Input ports selection 1~8.
- 3 OUT:** Output ports selection A~H.

## 6.5 RS-232 Pin Assignment

CMSI-8H8HS			Remote Control Console	
PIN	Assignment		PIN	Assignment
1	NC		1	NC
2	Tx		2	Rx
3	Rx	→	3	Tx
4	NC		4	NC
5	GND	←	5	GND
6	NC		6	NC
7	NC		7	NC
8	NC		8	NC
9	NC		9	NC

Baud Rate: 19200 bps

Data Bit: 8-bit

Parity: None

Stop Bit: 1-bit

Flow Control: None

## 6.6 RS-232 and Telnet Commands

Command	Description
<b>A1~A8</b>	Switch Output A to 1~8
<b>B1~B8</b>	Switch Output B to 1~8
<b>C1~C8</b>	Switch Output C to 1~8
<b>D1~D8</b>	Switch Output D to 1~8
<b>E1~E8</b>	Switch Output E to 1~8
<b>F1~F8</b>	Switch Output F to 1~8
<b>G1~G8</b>	Switch Output G to 1~8
<b>H1~H8</b>	Switch Output H to 1~8
<b>ABCD...1~ABCD...8</b>	Switch Output A B C D... to 1~8 at the same time
<b>SETIP &lt;IP&gt; &lt;SubNet&gt; &lt;GW&gt;</b>	Setting IP. SubNet. GateWay (Static IP)
<b>RSTIP</b>	IP Configuration Was Reset To Factory Defaults <DHCP>
<b>IPCONFIG</b>	Display the current IP config
<b>P0</b>	Power OFF
<b>P1</b>	Power ON
<b>I1~I8</b>	Switch all the Output to 1~8
<b>ST</b>	Display the current matrix status and F/W version
<b>RS</b>	System Reset to A1, B2, C3, D4, E5, F6, G7, H8
<b>EM</b>	Setting EDID MODE. 1-STD 2-TV
<b>?</b>	Display all the available commands
<b>Quit</b>	Exit(for telnet only)

*Note: Any commands will not be executed unless followed by a carriage return. Commands are case insensitive.*

## 6.7 Telnet Control


Before attempting to use the telnet control, please ensure that both the Matrix (via the 'LAN' port) and the PC/Laptop are connected to the active networks.

To access the telnet control in Windows 7, click on the 'Start' menu and type "cmd" in the Search field then press enter.

Under Windows XP go to the 'Start' menu and click on "Run", type "cmd" with then press enter.

Under Mac OS X, go to Go→Applications→Utilities→Terminal.


See below for reference.

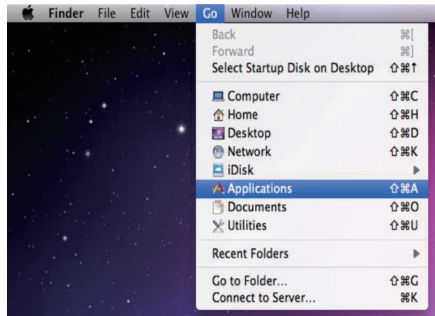




Once in the command line interface (CLI) type "telnet", the IP address of the unit you wish to control and "23", then hit enter.

*Note: The IP address of the Matrix can be displayed on the device's LCM monitor by pressing the Menu button twice/three times.*

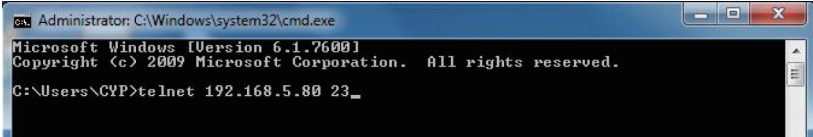

This will bring us into the device which we wish to control. Type "HELP" to list the available commands.

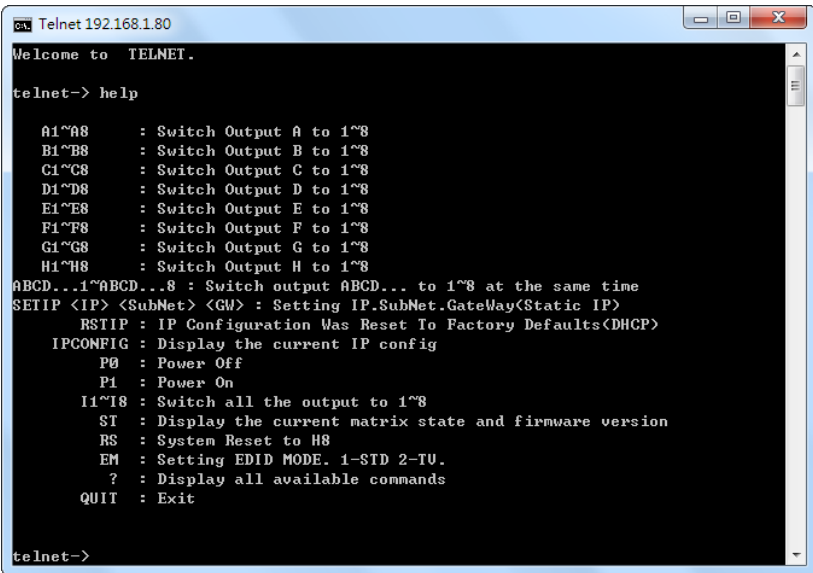


Type "IPCONFIG" To show all IP configurations. To reset the IP, type "RSTIP" and to use a set static IP, type "SETIP".

*Note: Any commands will not be executed unless followed by a carriage return. Commands are not case-sensitive. If the IP is changed then the IP Address required for Telnet access will also change accordingly.*


## 6.8 Web GUI Control

On a PC/Laptop that is connected to the same active network as the Matrix, open a web browser and type device's IP address on the web address entry bar. The browser will display the device's status, control and User setting pages.

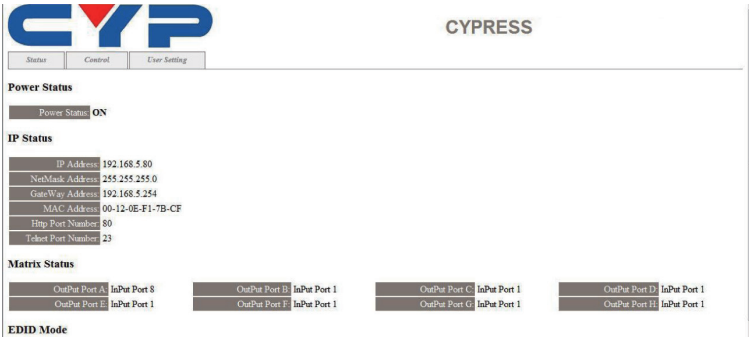


The screenshot shows the 'Status' tab of the CYPRESS Web GUI. It features the CYP logo and the word 'CYPRESS' in the top right. Below the navigation tabs (Status, Control, User Setting), the 'Power Status' is shown as 'ON'. The 'IP Status' section lists: IP Address: 192.168.4.80, NetMask Address: 255.255.255.0, Gateway Address: 192.168.4.254, MAC Address: 00-12-0E-F1-7B-CF, Http Port Number: 80, and Telnet Port Number: 23. The 'Matrix Status' section displays a grid of port configurations: OutPut Port A (InPut Port 8), OutPut Port B (InPut Port 1), OutPut Port C (InPut Port 1), and OutPut Port D (InPut Port 1). The 'EDID Mode' section is currently empty.

Click on the 'Control' tab to control power, input/output ports, EDID and reset mode.

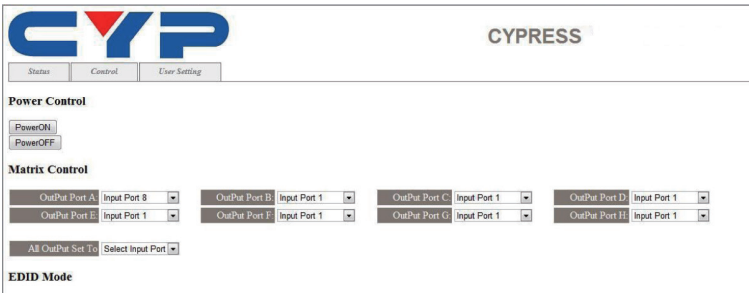


The screenshot shows the 'Control' tab of the CYPRESS Web GUI. It features the CYP logo and the word 'CYPRESS' in the top right. Below the navigation tabs (Status, Control, User Setting), the 'Power Control' section has 'PowerON' and 'PowerOFF' buttons. The 'Matrix Control' section contains four pairs of dropdown menus for OutPut Port A-D and Input Port 1-8, and an 'All OutPut Set To' dropdown menu. The 'EDID Mode' section is currently empty.

Click on the 'User Setting' tab allows you to reset the IP configuration. The system will ask for a reboot of the device every time any of the settings are changed. The IP address needed to access the Web GUI control will also need to be changed accordingly on the web address entry bar.

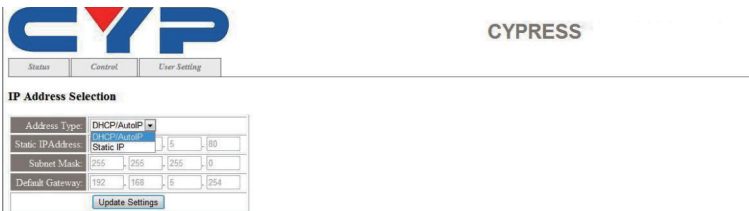

The screenshot shows the 'User Setting' tab of the CYPRESS Web GUI. It features the CYP logo and the word 'CYPRESS' in the top right. Below the navigation tabs (Status, Control, User Setting), the 'IP Address Selection' section includes a dropdown for 'Address Type' (set to DHCP/AutoIP), a 'Static IP Address' field (set to Static IP), and input fields for 'Subnet Mask' (255.255.255.0) and 'Default Gateway' (192.168.4.254). An 'Update Settings' button is located at the bottom of the form.

## 7. CONNECTION DIAGRAM

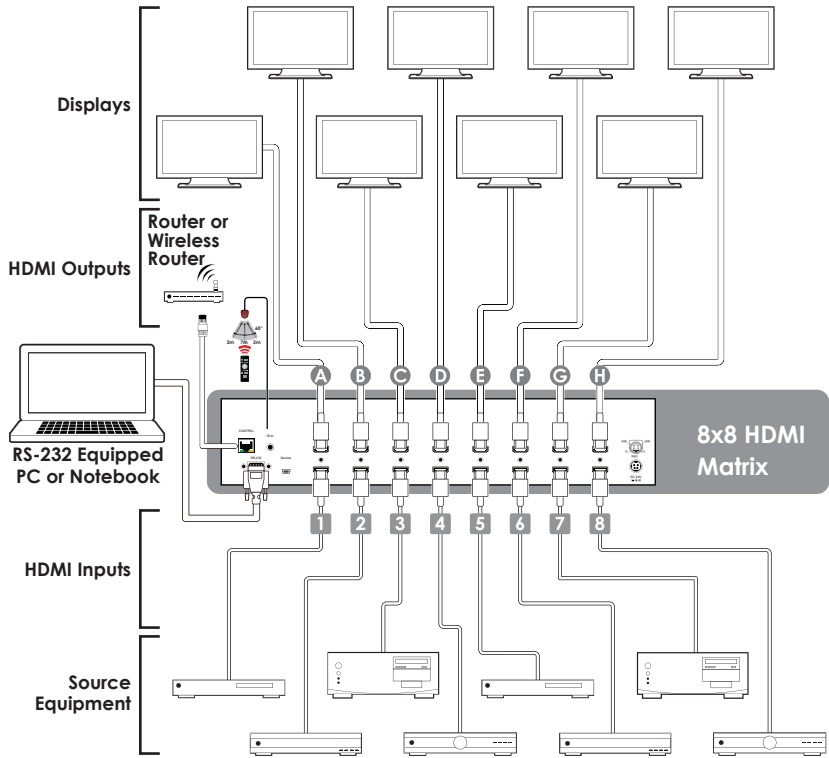



## 8. SPECIFICATIONS

<b>Video Bandwidth</b>	225 MHz/6.75 Gbps
<b>Input Ports</b>	8×HDMI, 1×RS-232, 1×IR Receiver, 1×Mini USB Type B (For firmware update only), 1×RJ-45 (Control)
<b>Output Ports</b>	8×HDMI
<b>HDMI Input Cable Distance</b>	15m/8-bit, 10m/12-bit
<b>HDMI Output Cable Distance</b>	15m/8-bit, 15m/12-bit
<b>ESD Protection</b>	Human-body Model: ± 8kV (Air-gap discharge) ± 4kV (Contact discharge)
<b>Power Supply</b>	24 V/6.25 A DC (US/EU standards, CE/ FCC/UL certified)
<b>Dimensions</b>	438 mm (W)×255 mm (D)×93 mm (H)
<b>Weight</b>	4278g
<b>Chassis Material</b>	Metal
<b>Silkscreen Color</b>	Black
<b>Operating Temperature</b>	0 °C~40 °C/32 °F~104 °F
<b>Storage Temperature</b>	-20 °C~60 °C/-4 °F~140 °F
<b>Relative Humidity</b>	20~90% RH (non-condensing)
<b>Power Consumption</b>	48 W

## 9. ACRONYMS

ACRONYM	COMPLETE TERM
<b>DTS</b>	Digital Theater System
<b>DVI</b>	Digital Theater System
<b>EDID</b>	Extended Display Identification Data
<b>HDCP</b>	High-bandwidth Digital Content Protection
<b>HDMI</b>	High-Definition Multimedia Interface
<b>HDTV</b>	High Definition Television
<b>LCM</b>	Liquid Crystal Module
<b>USB</b>	Universal Serial Bus
<b>VGA</b>	Video Graphics Array
<b>WUXGA</b>	Widescreen Ultra Extended Graphics Array





**CYPRESS TECHNOLOGY CO., LTD**

Home page: <http://www.cypress.com.tw>

20120614 MPM-CMSI8H8HS