
Extron

LockIt Plus • Installation Guide

Follow these instructions to secure the HDMI and USB-C connectors to the unit with the LockIt Plus lacing brackets provided:

- 1. Plug in the Cable Connect the HDMI or USB-C cable to the port.
- 2. Loosen the Screw Slightly loosen the mounting screw (do not remove it).
- 3. Attach the Bracket Place the bracket over the screw and tighten it. Do not overtighten the connector mounting screw.
- 4. Secure the Cable Tighten the tie wrap around the connector and bracket, and cut off the extra length.

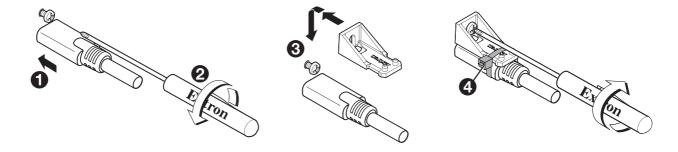


Lockit Plus • Installation Guide (Cont.)

Applications







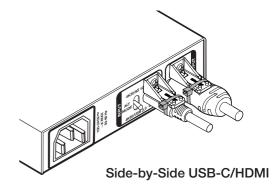

For information on safety guidelines, regulatory compliances, EMI/EMF compatibility, accessibility, and related topics, see the **Extron Safety** and Regulatory Compliance Guide on the Extron website.