

HDMI/DisplayPort to HDMI(MPO Output) Wall Type Converter

WMC-DH



Thank you for purchasing WMC-DH

WMC-DH, is a MPO/MTP-type wall plate converter for HDMI or DisplayPort. It receives a video stream and converts it into an HDMI TMDS compatible optical signal. The converted optical signal is connected to OPHIT's OMP-HM Receiver(OMP-HM-R) using one MPO-type optical cable.

Check your package

Check the package and make sure you have everything:

Contents

- (1) WMC-DH
- (2) 3-Pin Power Jack x 1ea
- (3) User's Guide

If any of these items are missing in your package, contact OPHIT or your supplier for support.

NOTE: Package content may differ if you have placed a special order or placed order from anywhere other than OPHIT CO., LTD. OPHIT CO., LTD. reserves the right to make changes without further notice to a product described herein to improve reliability, design, packaging or function.

⚠ The mini-USB port of WMC-DH front side is not user interface and Do not connect arbitrarily.

Installation

Installation Steps:

1. Connect the source devices to WMC-DH input port.(HDMI/DP)
2. Connect the OMP-HM receiver to WMC-DH output port using the MPO type-A cable.
3. Connect the sink devices to OMP-HM receiver.(HDMI)
4. When both input and output signals are detected, each LED indicator lights up.

Input Port
(DP)


LED Indicator
(DP Select: on)

LED Indicators
(Source/Display)

Slide Switch

Reset Switch

LED Indicator
(HDMI Select: on)
Input Port
(HDMI)

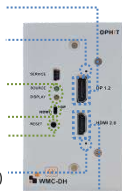

[Front Side]



[Rear Side]

DC +5V
3-Pin
Power Connector

Output Port
(MPO)

Warranty

We, OPHIT hereby warrant the final purchase of our product as follows.
In the case of troubles on our products, please contact the shop purchased.

One year limited warranty

Our customers have right to be served with free of charge when there is trouble in this product during 1 (one) year from the day purchased.

Out of warranty services

When you request services (in the case of non manufacturing defects but the troubles by misuse), may served with charge as follows.

- Defects of products caused by accident, disaster.
- Damages of products caused by the customer's carelessness or mistaken application.
- Damages of products caused by the application of the parts or products not supplied or sold by our company.
- Damages of products and related defects caused by not our staff or the men or group not nominated by us for services.

The interchanged parts and products for maintenance services shall be replaced as new parts and products operating normally, and the inter-changed parts and products shall be subjected to our company.

Technical and Sales Support

KOREA HQ

OPHIT CO., LTD.

#301 (Sun technovil), 77, Deogyong-daero 1471beon-gil, Yeongtong-gu, Suwon-si,
Gyeonggi-do, 16681, Republic of Korea

TEL: + 82 (0)31 695 5543

FAX: + 82 (0)31 695 5545

E-Mail

jhchoi35@ophit.com

Regional Office

USA

Foreseeson Custom Display

2210E, Winston Road Anaheim,
CA 92806 USA

TEL: +1-714 300 0540

FAX : +1-714 300 0546

E-mail: jhan@foreseesonusa.com

UK

Foreseeson UK Ltd

1 Walsey Road, East Molesey, Surrey, KT8
9EL, United Kingdom

TEL: +44-208-546-1047

FAX: +44-208-391-4953

E-mail: jason.kwon@fsnmed.eu

Europe

Foreseeson GmbH

Industriestrasse 38a
63150 Heusenstamm, Germany

TEL: +49 (0) 6104-643980

FAX: +49 (0) 6104-64398-11

E-mail: jason.kwon@fsnmed.eu