

4K HDMI Splitter **FTD-10x series**



***FTD-104** HDMI 1x4 Splitter

***FTD-102** HDMI 1x2 Splitter

Thank you for purchasing FTD-102/FTD-104

4K HDMI Splitter **FTD-10x series** allows PC's, DVD players and also other 4K source devices to be connected to two or up to four displays.

Check your package

Check the package and make sure you have everything:

Contents

- (1) FTD-102 or FTD-104 - HDMI Splitter
- (2) +12V/1A DC Power supply x 1pc
- (3) User's Guide


If any of these items are missing in your package, contact OPHIT or your supplier for support.

NOTE: Package content may differ if you have placed a special order or placed order from anywhere other than OPHIT CO., LTD. OPHIT CO., LTD. reserves the right to make changes without further notice to a product described herein to improve reliability, design, packaging or function.

Installation

Installation Steps:

1. Connect the included +12V DC power supply to FTD-10x and check power indicator become active.
2. Connect the source device to HDMI input port.
3. Connect the display devices to HDMI output ports.

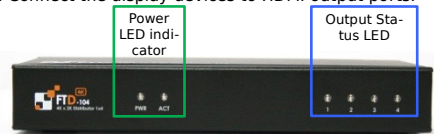

Resolution Information

1. Resolution setting

FTD-102, 104 supports real time EDID. When installed, FTD-10x will read EDID data from all the displays that are connected to FTD-10x's output ports and then it will automatically set the lowest supporting resolution of a display device among connected displays as default output resolution.


Individual resolution setting of each output port is not supported, all output resolutions are always same.

Example: If your display No.1's maximum supported resolution is 720P and display No.2, 3, 4's maximum supporting resolution is 4K then FTD-10x will automatically set 720P as output resolution when first connected. **If you require resolution change from this automatically set 720P resolution to other resolution then change resolution setting from your source device.** Once resolution has been changed from the source device then FTD-10x will remember this information and set as default when powered up next time.

NOTE: DVI monitor/display may not be supported and may cause noisy display or no display due to DVI monitor/display's characteristic.

Application

Model: FTD-104

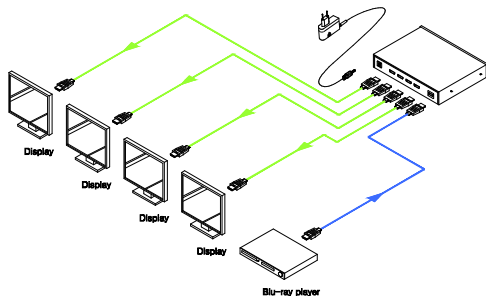

Warranty

We, OPHIT hereby warrant the final purchase of our product as follows.
In the case of troubles on our products, please contact the shop purchased.

One year limited warranty

Our customers have right to be served with free of charge when there is trouble in this product during 1(one) year from the day purchased.

Out of warranty services

When you request services (in the case of non manufacturing defects but the troubles by misuse), may served with charge as follows.

- Defects of products caused by accident, disaster.
- Damages of products caused by the customer's carelessness or mistaken application.
- Damages of products caused by the application of the parts or products not supplied or sold by our company.
- Damages of products and related defects caused by not our staff or the men or group not nominated by us for services.

The interchanged parts and products for maintenance services shall be replaced as new parts and products operating normally, and the inter-changed parts and products shall be subjected to our company.



RMA Request Form

RMA No.:

Customer Name:		Return Date:	
Company Name:		Phone:	
Model Name:		E-Mail:	
Serial No:		Place of Purchase:	

Address: (For RMA Return)

RMA details: (Please describe RMA status, application used and failure symptom)

Technical and Sales Support

KOREA HQ

OPHIT CO., LTD.

3F Suntechnovil, 5-27 Mangpo-Dong, Youngtong-Gu, Suwon-City,
Kyunggi-Do, Korea (443-400)

Tel: + 82 (0)31 695 5543

Fax: + 82 (0)31 695 5545

E-mail:

Support @ophit.com

Regional Office

USA

Foreseeson Custom Display

2210E, Winston Road Anaheim,
CA 92806 USA

Tel: +1-714-300-0540

Fax : +1-714-300-0546

E-mail: sshin@foreseesonusa.-
com

UK

Foreseeson UK Ltd

Unit 2Kingsmill Business Park, Chapel
Mill Rd.

Kingston Upon Thames, Surrey; KT1

3GZ; UK

Tel : +44 (0)208 546 1047

Fax : +44(0) 208 546 3931

E-mail: jasonkwon@fsnmed.eu

Europe

Foreseeson GmbH

Benzstr. 9, 61352 Bad
Homburg Germany

Tel.: +49 (0)6172 185310 20

Fax: +49 (0)6172 185310 11

E-mail:
christianelfert@fsnmed.eu

www.ophit.com

