



# CV-401D

DVI-D to Video Scan Converter



Operation Manual



## **DISCLAIMERS**

The information in this manual has been carefully checked and is believed to be accurate. Cypress Technology assumes no responsibility for any infringements of patents or other rights of third parties which may result from its use.

Cypress Technology assumes no responsibility for any inaccuracies that may be contained in this document. Cypress also makes no commitment to update or to keep current the information contained in this document.

Cypress Technology reserves the right to make improvements to this document and/or product at any time and without notice.

## **COPYRIGHT NOTICE**

No part of this document may be reproduced, transmitted, transcribed, stored in a retrieval system, or any of its part translated into any language or computer file, in any form or by any means—electronic, mechanical, magnetic, optical, chemical, manual, or otherwise—without express written permission and consent from Cypress Technology.

© Copyright 2011 by Cypress Technology.

All Rights Reserved.

Version 1.1 August 2011

## **TRADEMARK ACKNOWLEDGMENTS**

All products or service names mentioned in this document may be trademarks of the companies with which they are associated.





## SAFETY PRECAUTIONS

Please read all instructions before attempting to unpack, install or operate this equipment and before connecting the power supply.

Please keep the following in mind as you unpack and install this equipment:

- Always follow basic safety precautions to reduce the risk of fire, electrical shock and injury to persons.
- To prevent fire or shock hazard, do not expose the unit to rain, moisture or install this product near water.
- Never spill liquid of any kind on or into this product.
- Never push an object of any kind into this product through any openings or empty slots in the unit, as you may damage parts inside the unit.
- Do not attach the power supply cabling to building surfaces.
- Use only the supplied power supply unit (PSU). Do not use the PSU if it is damaged.
- Do not allow anything to rest on the power cabling or allow any weight to be placed upon it or any person walk on it.
- To protect the unit from overheating, do not block any vents or openings in the unit housing that provide ventilation and allow for sufficient space for air to circulate around the unit.

## REVISION HISTORY

VERSION NO.	DATE DD/MM/YY	SUMMARY OF CHANGE
VR0	25/04/11	Preliminary Release
VS1	11/10/12	Updated format/diagrams



## CONTENTS

<b>1. Introduction</b> .....	<b>1</b>
<b>2. Applications</b> .....	<b>1</b>
<b>3. Package Contents</b> .....	<b>1</b>
<b>4. System Requirements</b> .....	<b>1</b>
<b>5. Features</b> .....	<b>2</b>
<b>6. Operation Controls and Functions</b> .....	<b>3</b>
6.1 Top Panel .....	3
6.2 Left Panel .....	4
6.3 Right Panel .....	4
6.3 OSD Menu .....	5
6.4 Supported Input Timing .....	7
<b>7. Connection Diagram</b> .....	<b>8</b>
<b>8. Specifications</b> .....	<b>9</b>
<b>9. Acronyms</b> .....	<b>10</b>





## 1. INTRODUCTION

The DVI to Video Scan Converter is designed to convert the digital video signal from DVI-D sources to analog composite (CVBS) signal (NTSC or PAL). It is HDMI and DVI compliant and has many great features such like 3D noise reduction, frame rate conversion, adaptive contrast enhancement and many more. It also has a simple on-screen display (OSD) menu that allows the user to access the display status including input/output information.

## 2. APPLICATIONS

- Convert DVI-D signal to Composite (CVBS) signal
- Display graphics card signal on CRT monitor
- Display PC signal to LCD display

## 3. PACKAGE CONTENTS

- DVI-D to Video Scan Converter
- Power Adaptor
- Operation Manual

## 4. SYSTEM REQUIREMENTS

Input source equipment such as a PC/Notebook with DVI cable and output display (TV) with CVBS input port and cable.


## 5. FEATURES

- DVI 1.0 compliant
- Converts video signal from DVI-D source to NTSC/PAL composite (CVBS) signal
- Accepts a wide range of input resolutions of 480p to 1080p@60 Hz (DVI-D) and VGA to WUXGA@60 Hz (PC)
- 3D noise reduction in both the temporal and spatial domain
- Frame rate conversion
- Adaptive contrast enhancement
- OSD Display
- Overscan and underscan adjustment
- Phase and Aspect adjustment
- No software installation required
- Compact and elegant design

*Note: The converter does NOT support HDCP. If any HDCP-encrypted content is played, there will be no video output.*

## 6. OPERATION CONTROLS AND FUNCTIONS

### 6.1 Top Panel

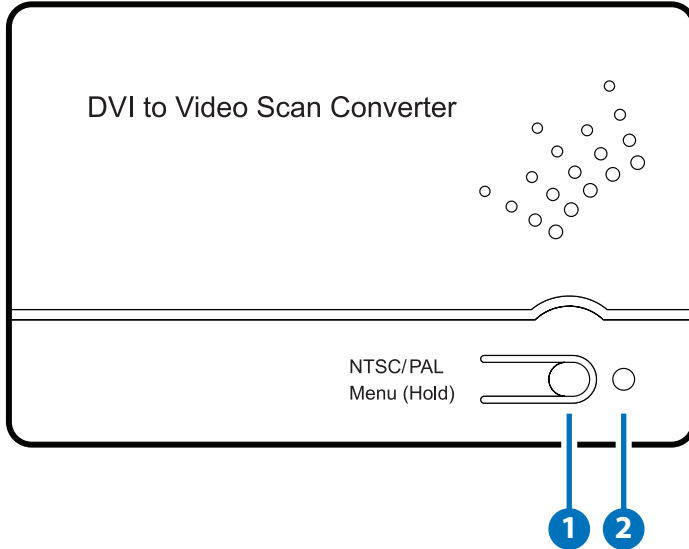

- 1 NTSC/PAL MENU (Hold):** Press this button to bring up the On-Screen Display (OSD) which will display the input timing and the output TV format information.


When the OSD is displayed, press the button again to switch the output TV system from NTSC to PAL or from PAL to NTSC.

Press and hold this button for 3 seconds the OSD will bring up the selection menu. Press it sequentially to select the required setting.

- 2 POWER LED:** This LED will illuminate in RED when the unit is connected to the power supply.




## 6.2 Left Panel

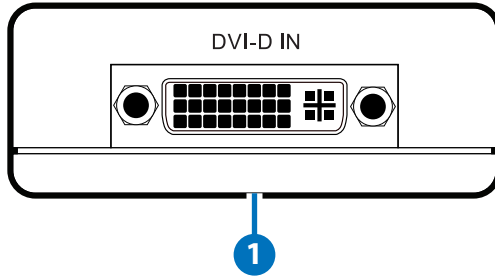

- 1 **DVI-D IN:** Connect to the DVI equipped source equipment such as a PC or notebook for DVI input signal with a DVI cable.

## 6.3 Right Panel

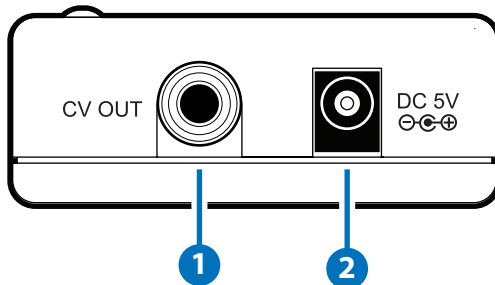

- 1 **CV OUT:** Connect to the output display TV or monitor with RCA cable for display of the converted composite (CVBS) signal.
- 2 **DV5V:** Plug the 5V DC power supply included in the package into the unit and connect the adaptor to an AC wall outlet.

### 6.3 OSD Menu

<b>IN</b>	1280×960 @60 (Input Timing)
<b>OUT</b>	NTSC (Output TV System)

Press the Menu button once to bring up the OSD and display the input (IN) and Output (OUT) information.

<b>NTSC</b>	
<b>PAL</b>	
<b>Underscan 1</b>	
<b>Underscan 2</b>	
<b>Overscan</b>	
<b>Aspect Adj</b>	Full Screen
	Letterbox
	Pan & Scan
	Auto TV 4:3
	Auto TV 16:9

Press and hold the MENU button for 3 seconds to bring up the OSD then press it repeatedly to move the OSD cursor to the desired selection. Once the selection is made, if the MENU button is not pressed for a few seconds, the OSD will disappear and the display will output following the selected parameters.

Below is the example of the scan selection result.

Source	TV	Underscan 1	Underscan 2	Overscan

**Aspect Adjustment:** There are total of 5 different aspect ratio adjustments: Full Screen, Letterbox, Pan & Scan and Auto TV 4:3 & Auto TV 16:9.

**Full Screen:** To allow the image to fill the screen of the TV.

















**Letterbox:** To fit a 16:9 formatted video signal on a 4:3 display. Horizontal Black bars will be displayed above and below the image

**Pan & Scan:** To fit a 4:3 formatted video signal on a 16:9 display. Vertical black bars will be displayed at both sides of the the image.

**Auto TV 4:3:** The device will detect the input source aspect ratio of 4:3 or 16:9 and make the automatically make the adjustment to 4:3.

**Auto TV 16:9:** The device will detect the input source aspect ratio of 16:9 or 4:3 and automatically make the adjustment to 16:9.

Blow is the sample chart of the selection result:

Source TV	Aspect Adjust	Full Screen	Letterbox	Pan&Scan	Auto TV 4:3	Auto TV 16:9
 4:3	 4:3		×	×		×
	 16:9		×		×	
 16:9	 4:3			×		×
	 16:9		×	×	×	




## 6.4 Supported Input Timing

<b>HD Timing</b>	480p	60
	576p	50
	720p	50/60
	1080i	50/60
	1080p	50/60
<b>PC Timing</b>	640×480	60/72/75/85
	720×400	70
	800×600	56/60/72/75/85
	1024×768	60/70/75/85
	1152×864	70/75/85
	1280×720	60
	1280×768	60/60 (RB)
	1280×800	60/60 (RB)
	1280×960	60
	1280×1024	60
	1366×768	60/60 (RB)
	1400×1050	60/60 (RB)
	1440×900	60/60 (RB)
	1600×1200	60
	1680×1050	60/60 (RB)
1920×1200	60 (RB)	

*Note: If the input resolution is not supported, the OSD will show 'IN Not Support'.*

## 7. CONNECTION DIAGRAM

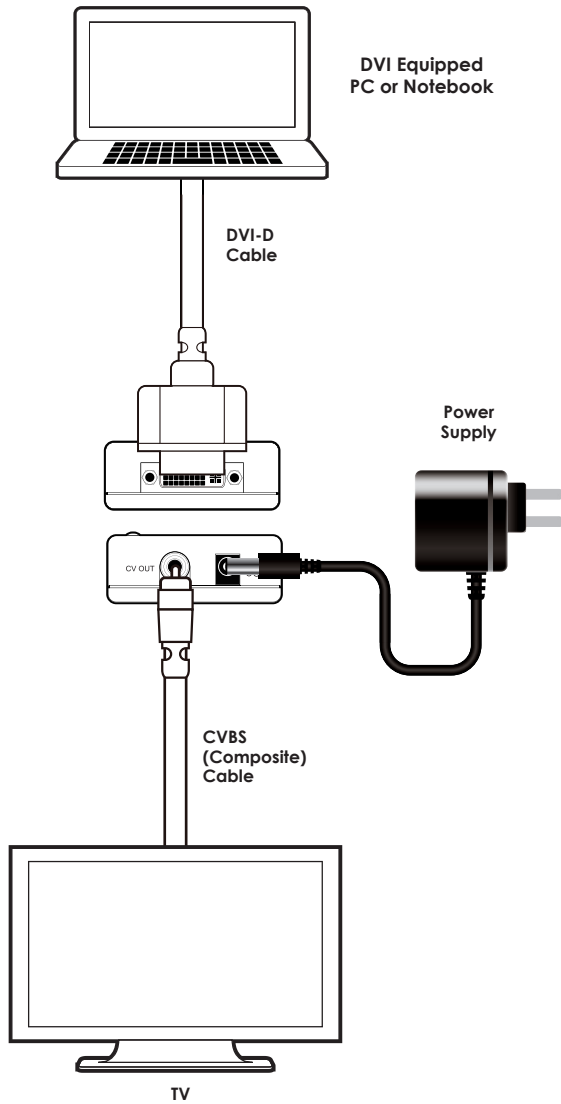

## 8. SPECIFICATIONS

<b>Input Port</b>	1×DVI-D
<b>Output Ports</b>	1×CVBS
<b>Output Video</b>	NTSC/PAL
<b>ESD Protection</b>	Human body model: ±8kV (air-gap discharge) ±6kV (contact discharge)
<b>Power Supply</b>	5V DC/1 A linear power adaptor (US/EU standards, CE/FCC/UL certified)
<b>Dimensions</b>	64 mm (W)×104 mm (D)×26 mm (H)
<b>Weight</b>	120 g
<b>Chassis Material</b>	Plastic
<b>Silkscreen Color</b>	White
<b>Operating Temperature</b>	0 °C~40 °C/32 °F~104 °F
<b>Storage Temperature</b>	-20 °C~60 °C/-4 °F~140 °F
<b>Power Consumption</b>	3 W
<b>Relative Humidity</b>	20~90% RH (non-condensing)

## 9. ACRONYMS

ACRONYM	COMPLETE TERM
<b>CRT</b>	Cathode Ray Tube
<b>HDMI</b>	High-Definition Multimedia Interface
<b>LCD</b>	Liquid Crystal Display
<b>NTSC</b>	National Television System Committee
<b>PAL</b>	Phase Alternating Line



**CYPRESS TECHNOLOGY CO., LTD**

Home page: <http://www.cypress.com.tw>