
Quick Start Guide

This quick start guide describes how to install and use the Hardened Ethernet Switch. Capable of operating at temperature extremes of -10°C to +60°C, this is the switch of choice for harsh environments constrained by space.

Physical Description

The Terminal Block and Power inputs

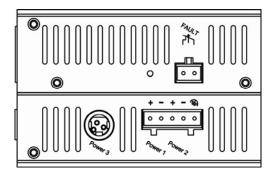


| Power Input Assignment | | | | |
|------------------------|---|--------------|------------------|--|
| Power3 | | 12VDC | DC Jack | |
| Power2 | + | 12-48VDC | | |
| FOWEIZ | _ | Power Ground | | |
| Power1 | + | 12-48VDC | Terminal Block | |
| Foweri | _ | Power Ground | Terriiriai Blook | |
| (+ | | Earth Ground | | |
| Relay Alarm Assignment | | | | |
| FAULT | *Relay warning signal disable for following: 1. The relay contact closes if Power1 and Power2 are both failed but Power3 on. 2. The relay contact closes if Power3 is failed but Power1 and Power2 are both on. | | | |

DC Terminal Block Power Inputs: There are two pairs of power inputs can be used to power up this switch. Redundant power supplies function is supported.

The 10/100Base-TX and 100Base-FX Connectors

The 10/100Base-TX Connections

The following lists the pinouts of 10/100Base-TX ports.

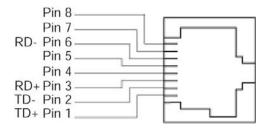

| Pin | Regular Ports | Uplink port |
|-----|------------------------|------------------------|
| 1 | Output Transmit Data + | Input Receive Data + |
| 2 | Output Transmit Data - | Input Receive Data - |
| 3 | Input Receive Data + | Output Transmit Data + |
| 4 | NC | NC |
| 5 | NC | NC |
| 6 | Input Receive Data - | Output Transmit Data - |
| 7 | NC | NC |
| 8 | NC | NC |

2. The 100Base-FX Connections

The fiber port pinouts: The Tx (transmit) port of device I is connected to the Rx (receive) port of device II, and the Rx (receive) port of device I to the Tx (transmit) port of device II.





3. The WDM 100Base-FX Connections


The fiber port pinouts: Only one single-mode optical fiber is required to transmit and receive data.



The Port Status LEDs

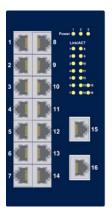

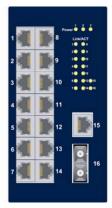

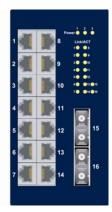

| LED | State | Indication |
|---------------------------|----------|--|
| 10/100Base-TX, 100Base-FX | | |
| Link/ACT Steady | | A valid network connection established. |
| (Green) | Flashing | Transmitting or receiving data. ACT stands for ACTIVITY. |


Functional Description

- Meets IEC61000-6-2 EMC Generic Standard Immunity for industrial environment.
- Supports IEEE802.3/802.3u/802.3x. Auto-negotiation: 10/100Mbps, Full/Half-duplex, Auto-Negotiation, Auto MDI/MDIX.
- 100Base-FX: Multi/Single mode SC or ST type, WDM Single mode SC type.
- Supports 4096 MAC addresses. Provides 1.625M bits buffer memory.
- Alarms for power failure by relay output 1A @ 24VDC.
- Power Supplies: Redundant 12-48VDC Terminal Block power inputs and 12VDC DC JACK with 100-240VAC external power supply. "For Use with Model UP0351E-12P as power jack supply source by Universal Micro Electronics Co., Ltd.".
- Field Wiring Terminal: Use Copper Conductors Only, 60/75[°]C, 14-24 AWG torque value 4.5 lb-in.
- Operating voltage and Max. current consumption: 0.7A
 @ 12VDC, 0.35A @ 24VDC, 0.175A @ 48VDC. Power consumption: 8.4W Max.
- Operating temperature ranges from -10°C to 60°C (14°F to 140°F). UL508 Industrial Control Equipment certified Maximum Surrounding Air Temperature @ 60°C (140°F).
- · For use in Pollution Degree 2 Environment.
- Supports Din-rail or Panel Mounting installation.

Assembly, Startup, and Dismantling

 Assembly: Place the switch on the DIN rail from above using the slot. Push the front of the switch toward the mounting surface until it audibly snaps into place.

- Startup: Connect the supply voltage to start up the switch via the terminal block (or DC JACK).
- Dismantling: Pull out the lower edge and then remove the switch from the DIN rail.

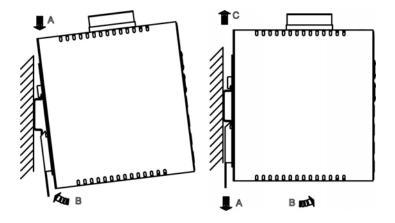

Preface

A member of the growing family of rugged switches, this switch addresses a need for a smaller switch. This switch provides an affordable solution for rugged and outdoor environment, transportation road-side cabinet, industrial floor shop, multitenant dwellings or Fiber To The Home (FTTH) applications. Capable of operating at temperature extremes of -10°C to +60°C, this is the switch of choice for harsh environments constrained by space.

Plug-and-Play Solution:

The switch is a plug-and-play Fast Ethernet Switch in compact size. It doesn't have any complicated software to set up.

This manual describes how to install and use the hardened Ethernet Switch. This switch integrates full wire speed switching technology. This switch brings the answer to complicated hardened networking environments.

To get the most out of this manual, you should have an understanding of Ethernet networking concepts.

In this manual, you will find:


- Features on the switch
- Illustrative LED functions
- Installation instructions
- Specifications


Table of Contents


| QUICK START GUIDE | 1 |
|---|--|
| PHYSICAL DESCRIPTION The Terminal Block and Power inputs The 10/100Base-TX and 100Base-FX Connectors The Port Status LEDs FUNCTIONAL DESCRIPTION ASSEMBLY, STARTUP, AND DISMANTLING | 1 1 2 3 4 4 |
| Preface | 6 |
| TABLE OF CONTENTS | 7 |
| PRODUCT OVERVIEW | 8 |
| HARDENED ETHERNET SWITCH PACKAGE CONTENTS PRODUCT HIGHLIGHTS Basic Features FRONT PANEL DISPLAY PHYSICAL PORTS | 8 8 9 9 10 11 |
| INSTALLATION | 12 |
| SELECTING A SITE FOR THE SWITCH DIN RAIL MOUNTING WIRING DIAGRAM CONNECTING TO POWER Redundant DC Terminal Block Power Inputs 12VDC DC Jack Alarms for Power Failure CONNECTING TO YOUR NETWORK Cable Type & Length Cabling | 12 13 14 15 15 16 17 17 |
| SPECIFICATIONS | 19 |
| APPENDIX A – CONNECTOR PINOUTS | 21 |

Product Overview

Hardened Ethernet Switch

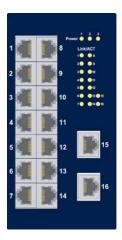

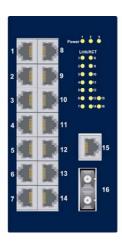

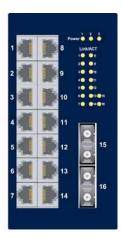

Package Contents

When you unpack the product package, you shall find the items listed below. Please inspect the contents, and report any apparent damage or missing items immediately to your authorized reseller.


- ✓ This Switch
- √ User's Manual
- ✓ External power adapter & Power Cord (Optional)


Product Highlights


Basic Features

- Meets IEC61000-6-2 EMC Generic Standard Immunity for industrial environment.
- Support 802.3/802.3u/802.3X.
- Auto-negotiation: 10/100Mbps, Full/Half-duplex; Auto MDI/MDIX.
- Support 4096 MAC addresses.
- Provides 1.625M bits memory buffer.
- Alarms for power failure by relay output 1A @ 24VDC.
- Power Supplies: Redundant 12-48VDC Terminal Block power inputs and 12VDC DC JACK with 100-240VAC external power supply. "For Use with Model UP0351E-12P as power jack supply source by Universal Micro Electronics Co., Ltd.".
- Field Wiring Terminal: Use Copper Conductors Only, 60/75[°]C, 14-24 AWG torque value 4.5 lb-in.
- Operating voltage and Max. current consumption: 0.7A
 @ 12VDC, 0.35A @ 24VDC, 0.175A @ 48VDC. Power consumption: 8.4W Max.
- Operating temperature ranges from -10°C to 60°C (14°F to 140°F). UL508 Industrial Control Equipment certified Maximum Surrounding Air Temperature @ 60°C (140°F).
- · For use in Pollution Degree 2 Environment.
- Supports DIN-Rail or Panel Mounting installation.

Front Panel Display

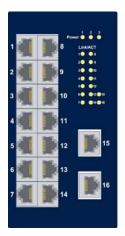

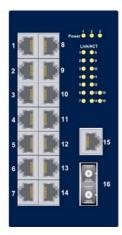

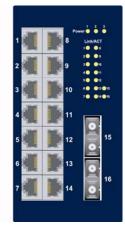

Status LEDs

| LED | State | Indication | |
|--------------------|----------|--|--|
| POWER | | | |
| Power 1 Power 2 | Steady | Switch is properly connected to power and turned on. | |
| Power 3 (Green) | Off | Switch is not connected to power and is turned off. | |
| 10/100TX or 100FX | | | |
| Link/ACT | Steady | A valid network connection established. | |
| (Green) | Flashing | Transmitting or receiving data. ACT stands for ACTIVITY. | |

Physical Ports

This switch provides:

- Sixteen 10/100Base-TX ports
- Fifteen 10/100Base-TX ports + one 100Base-FX port
- Fourteen 10/100Base-TX ports + two 100Base-FX ports

CONNECTIVITY

- RJ-45 connectors
- SC or ST connector on 100Base-FX fiber port.

Installation

This chapter gives step-by-step instructions about how to install the switch:

Selecting a Site for the Switch

As with any electric device, you should place the switch where it will not be subjected to extreme temperatures, humidity, or electromagnetic interference. Specifically, the site you select should meet the following requirements:


- The ambient temperature should be between -10 to 60 degrees Celsius.
- The relative humidity should be less than 95 percent, non-condensing.
- Surrounding electrical devices should not exceed the electromagnetic field (RFC) standards.
- Make sure that the switch receives adequate ventilation.
 Do not block the ventilation holes on each side of the switch
- The power outlet should be within 1.8 meters of the switch.

DIN Rail Mounting


Fix the DIN rail attachment plate to the back panel of the switch.

Installation: Place the switch on the DIN rail from above using the slot. Push the front of the switch toward the mounting surface until it audibly snaps into place.

Removal: Pull out the lower edge and then remove the switch from the DIN rail.

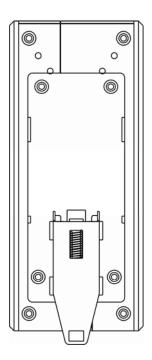

Wiring Diagram

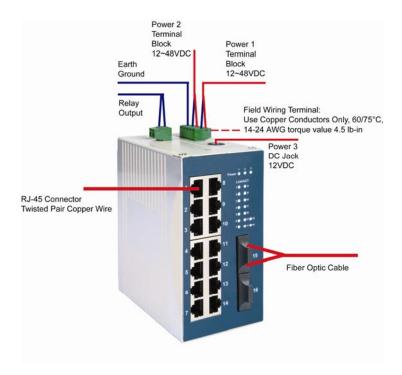

Connecting to Power

Redundant DC Terminal Block Power Inputs and 12VDC DC Jack:


Redundant DC Terminal Block Power Inputs

There are two pairs of power inputs can be used to power up this device. You only need to have one power input connected to run the switch.

- Step 1: Connect the DC power cord to the plug-able terminal block on the switch, and then plug it into a standard DC outlet.
- Step 2: Disconnect the power cord if you want to shut down the switch.

12VDC DC Jack

- Step 1: Connect the supplied AC to DC power adapter to the receptacle on the topside of the switch.
- Step 2: Connect the power cord to the AC to DC power adapter and attach the plug into a standard AC outlet with the appropriate AC voltage.

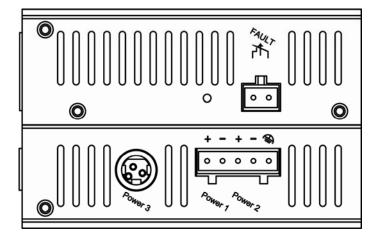

Alarms for Power Failure

Step 1: There are two pins on the terminal block are used for power failure detection. It provides the normally closed output when the power source is active. Use this as a dry contact application to send a signal for power failure detection.

| Power Input Assignment | | | |
|------------------------|---|--------------|----------------|
| Power3 | | 12VDC | DC Jack |
| Power2 + | | 12-48VDC | |
| Fowerz | _ | Power Ground | |
| H + | | 12-48VDC | Terminal Block |
| Power1 | | Power Ground | Terrimar Block |
| (| | Earth Ground | |
| Relay Alarm Assignment | | | |
| 子 FAULT | *Relay warning signal disable for following: 1. The relay contact closes if Power1 and Power2 are both failed but Power3 on. 2. The relay contact closes if Power3 is failed but Power1 and Power2 are both on. | | |

Special note:

The relay output is normal open position when there is no power to the switch. Please do not connect any power source to this terminal to prevent the shortage to your power supply.

Connecting to Your Network

Cable Type & Length

It is necessary to follow the cable specifications below when connecting the switch to your network. Use appropriate cables that meet your speed and cabling requirements.

Cable Specifications

| Cable Opecinications | | | | |
|----------------------|-----------|-----------------------------------|-----------------------------------|---------------------|
| Speed | Connector | Port Speed Half/Full Duplex | Cable | Max. Distance |
| 10Base-T | RJ-45 | 10/20 Mbps | 2-pair UTP/STP Cat. 3, 4, 5 | 100 m |
| 100Base-TX | RJ-45 | 100/200 Mbps | 2-pair UTP/STP Cat. 5 | 100 m |
| 100Base-FX | SC, ST | 100/200 Mbps | MMF (50 or 62.5μm) | 2 km |
| 100Base-FX | SC, ST | 100/200 Mbps | SMF (9 or 10µm) | 20, 40, or 75 km |

Cabling

- Step 1: First, ensure the power of the switch and end devices are turned off.
- <Note> Always ensure that the power is off before any installation.
- Step 2: Prepare cable with corresponding connectors for each type of port in use.
- Step 3: Consult the previous section for cabling requirements based on connectors and speed.
- Step 4: Connect one end of the cable to the switch and the other end to a desired device.
- Step 5: Once the connections between two end devices are made successfully, turn on the power and the switch is operational.

Specifications

| Hardened Ethernet | 10/100Base-TX auto-negotiating ports with | |
|-------------------------------|--|--|
| Switch | RJ-45 connectors, 100Base-FX fiber ports | |
| Applicable | IEEE 802.3 10Base-T | |
| Standards | IEEE 802.3u 100Base-TX/FX | |
| Switching Method | Store-and-Forward | |
| Forwarding Rate | | |
| 10Base-T: | 10 / 20Mbps half / full-duplex | |
| 100Base-TX/FX: | 100 / 200Mbps half / full-duplex | |
| Performance | 14,880pps for 10Mbps | |
| | 148,810pps for 100Mbps | |
| Cable | | |
| 10Base-T: | 2-pair UTP/STP Cat. 3, 4, 5 | |
| 100Base-TX: | 2-pair UTP/STP Cat. 5 | |
| 400D EV. | Up to 100m (328ft) | |
| 100Base-FX: LED Indicators | MMF (50 or 62.5μm), SMF (9 or10μm) Per unit – | |
| LED indicators | Power status (Power 1, Power 2, Power 3) | |
| | Per port – | |
| | 10/100TX or 100FX - Link/ACT | |
| Dimensions | 69mm (W) × 110mm (D) × 135mm (H) | |
| Dimensions | (2.72" (W) x 4.33" (D) x 5.31" (H)) | |
| Net Weight | 0.87Kg (1.92lbs.) | |
| Power | Terminal Block: 12-48VDC | |
| | DC Jack: 12VDC, External AC/DC required | |
| Operating Voltage & | 0.7A @ 12VDC, 0.35A @ 24VDC, 0.175A @ | |
| Max. Current | 48VDC | |
| Consumption | 1,0.23 | |
| Power Consumption | 8.4W Max. | |
| Operating | -10°C to 60°C (14°F to 140°F) | |
| Temperature | UL508 Industrial Control Equipment certified | |
| | Maximum Surrounding Air Temperature @ | |
| | 60°C (140°F) | |
| Storage Temperature | -40°C to 85°C (-40°F to 185°F) | |
| Humidity | 5%-95% non-condensing | |
| Safety | UL508, EN60950-1, IEC60950-1 | |
| | | |


| EMI | |
|----------------------|--|
| FCC Part 15, Class A | |
| EN61000-6-3: | |
| EN55022 | |
| EN61000-3-2 | |
| EN61000-3-3 | |

Hardened Ethernet Switch

| EMS |
|--|
| EN61000-6-2: |
| EN61000-4-2 (ESD Standard) |
| EN61000-4-3 (Radiated FRI Standards) |
| EN61000-4-4 (Burst Standards) |
| EN61000-4-5 (Surge Standards) |
| EN61000-4-6 (Induced RFI Standards) |
| EN61000-4-8 (Magnetic Field Standards) |
| EN61000-4-11 (Voltage Dips Standards) |
| Environmental Test Compliance |
| IEC60068-2-6 Fc (Vibration Resistance) |
| IEC60068-2-27 Ea (Shock) |
| IEC60068-2-32 Ed (Free Fall) |

Appendix A – Connector Pinouts

Pin arrangement of RJ-45 connectors:

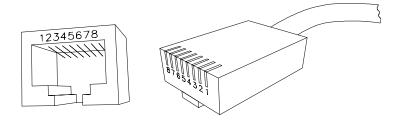

RJ-45 Connector and Cable Pins

The following table lists the pinout of 10/100Base-TX ports.

| Pin | Regular Ports | Uplink port |
|-----|------------------------|------------------------|
| 1 | Output Transmit Data + | Input Receive Data + |
| 2 | Output Transmit Data - | Input Receive Data - |
| 3 | Input Receive Data + | Output Transmit Data + |
| 4 | NC | NC |
| 5 | NC | NC |
| 6 | Input Receive Data - | Output Transmit Data - |
| 7 | NC | NC |
| 8 | NC | NC |